‘APPY HOLIDAYS®
LIGHTS AND SOUNDS OF CHRISTMAS®
Instruction Manual
Model No. 60401

Scan to get APP

Patent Pending

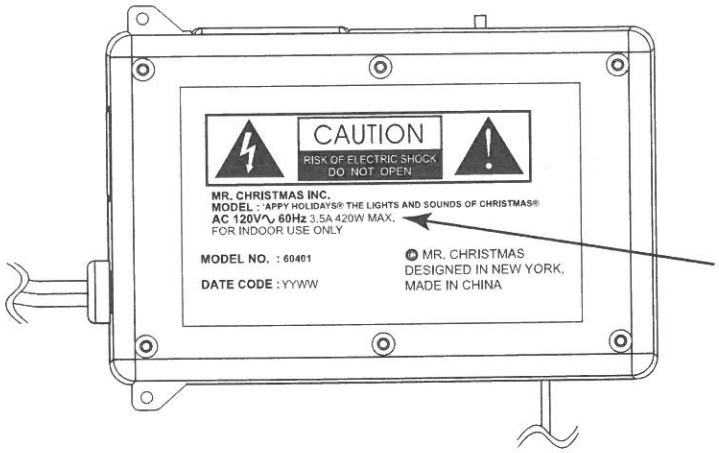
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
MR. CHRISTMAS INC.
MODEL : 'APPY HOLIDAYS® THE LIGHTS AND SOUNDS OF CHRISTMAS®
AC 120V~ 60Hz 3.5A 420W MAX.
FOR INDOOR USE ONLY
MODEL NO. : 60401
DATE CODE : YYWW
MR. CHRISTMAS
DESIGNED IN NEW YORK,
MADE IN CHINA

Rating: AC
120V~60Hz
420W Max.

WARNING - When using 'APPY HOLIDAY® THE LIGHTS AND SOUNDS OF CHRISTMAS®, basic safety precautions should always be followe to reduce the risk of fire, electric shock, and personal injury.
This product shall be connected directly to a GFCI outlet. The mai plug of this product is used as the disconnect device and shall remain readily accessible and operable.

SAFETY RELATED GRAPHICAL SYMBOLS

WARNING - Is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

ELECTRIC SHOCK HAZARD - Intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

AC ONLY

THIS IS NOT A TOY!
IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precaution should always be followed include the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in indoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI)outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
5. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
8. This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
9. Do not use this product for other than its intended use.
10. Do not hang ornaments or other objects from cord, wire, or light string.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when it use.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
14. This product employs overload protection (fuse). A brown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
15. Read and follow all instructions that are on the product or provided with the product.

16. SAVE THESE INSTRUCTIONS.

TABLE OF CONTENT

1. USE AND CARE INSTRUCTIONS 3
2. USER SERVICING INSTRUCTIONS 3
3. RATINGS 4
4. DESCRIPTION 4
5. INSTALLATION 4
6. OPERATION 5
7. SONG LIST 8
8. TROUBLE SHOOTING 9
9. WARRANTY 10
10. FEDERAL COMMUNICATON COMMISSION CODE, PART 15 10

USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live tree in which the needles are brown or break odd easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, crack in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not to use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTUCTIONS

Your 'APPY HOLIDAYS®LIGHTS AND SOUNDS OF CHRISTMAS® comes with spare fuses to replace burn-out fuses located in the plug. Be sure to replace a burnt-out fuse with fuse of the same rating : 5A 125V UL listed fuse.

CAUTION: BEFORE REPLACING, ALWAYS DISCONNECT THE POWER SUPPLY CORD FROM THE POWER SOURCE

RISK OF FIRE. Do not replace attachment plug. Contains safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet devise. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on op of attachment plug towards blades
3. Remove fuse carefully. Turn fuseholder over to remove fuse.
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product)
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

CONNECTING LIGHT STRINGS-MAXIMUM CAPACITY IS 420 WATTS

If connecting to a light string that does not have a Wattage (W) rating, calculate the wattage as follows: Multiply the cur rent (__ A) which is on the flag-type by 120.

For Example: Light string is rated 120V,60Hz, 0.2 Amps. 0.2X120=24 Watts
Add the wattage of each light string together for a total of 420 Watts or less. (Do not exceed 420 Watts)

RATINGS

Model 60401
Control Box Rating: 120VAC, 60Hz, 3.5, 420W
Remote Rating: " AA " Cell x 3, 4.5V

DESCRIPTION

Thank you for purchasing the 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS.®

The maximum capacity is 420 watts

WARNING: DO NOT CONNECT LIGHTS STRINGS OR SETS IN EXCESS OF THE ABOVE CAPACITY.

INSTALLATION

Note: If you have not yet assembled your lighting, it may be useful to check your light strings before assembly to identify missing/faulty bulbs.

BEFORE INSTALLING: Consider how to best set up your light show.

Capacity
The 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS® has a capacity of 420 Watts. Please refer to the packaging, instruction manual or the warning tags on your holiday lighting for the exact wattage of each item being plugged into the unit. In order not to exceed the 420 watts, you must add up the wattage of each item being plugged into the unit to attain the total wattage. See the "connecting light strings" section on page 3.

WARNING: DO NOT EXCEED 420 WATTS

OPERATION

1. Plug your holiday lighting into the outlet provided on the unit (MAX. 420 WATTS).
2. Plug the unit line cord into a GFCI equipped outlet.
3. Place the Sensor on the Christmas tree and pointing it outward as FIG. 1
4. Insert 3 x AA batteries in the remote making sure to align the "+" and "-" in the proper position.

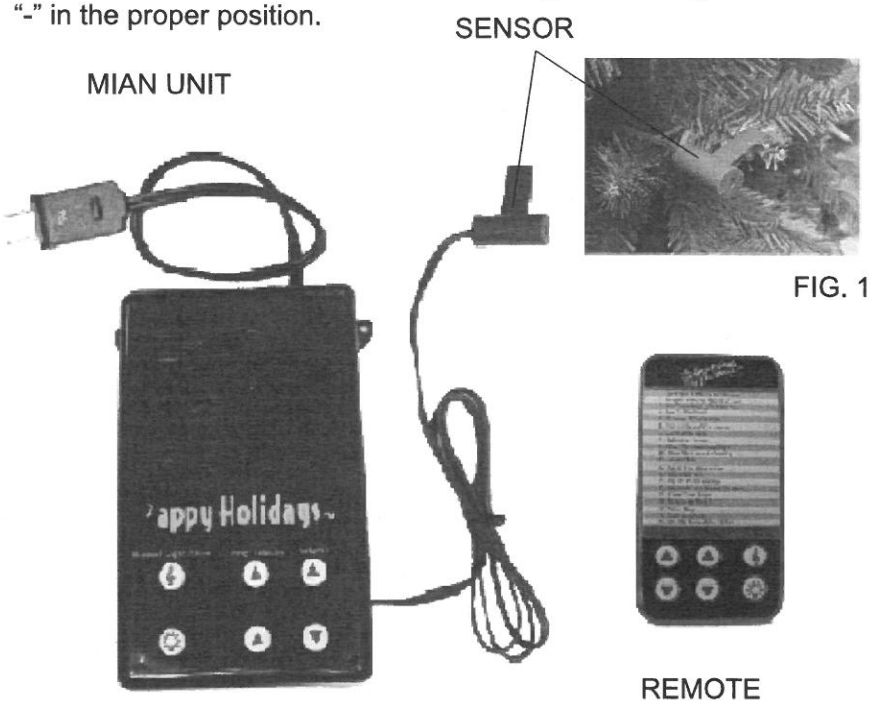

FIG. 1

5. Use the six function keys on the remote or key panel on the unit to control music and light effect.

Music light show	Song select keys	Volume select keys
" 𝄞 "music on / off	" ▲" jump prev. song	" ▲" volume up "
" ☼ "light mode select	" ▼" jump next song	" ▼ " volume down "

OPERATION(continued)

For either the main unit or remote:

Press " 𝄞 ", music plays and the light strings plugged into the unit flash.
Press again and the music stops and the light strings turn "OFF".

Change the light string effect by pressing " ☼ " once, the light strings will now be steady.
Press again and the lights go "OFF".

Change the song playing by pressing the song select keys " ▼ " , " ▲".
Set the music volume by pressing the volume keys " ▲ " , " ▼ ".

When the music is off, press " ☼ " to turn on the light strings, press again to turn off the light strings

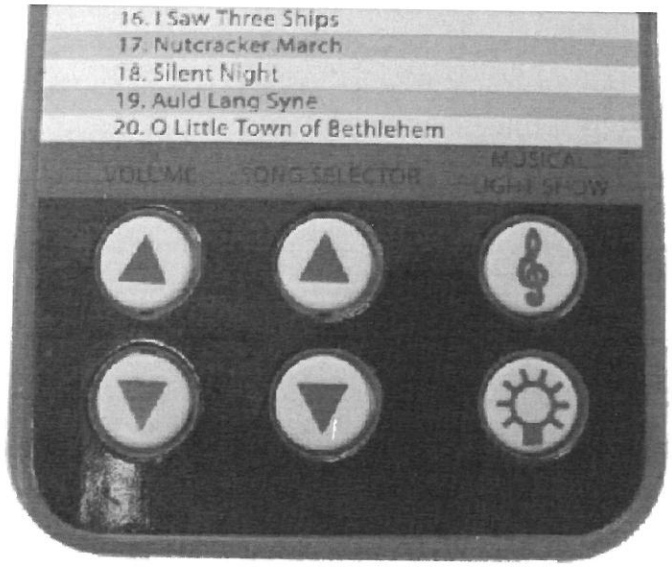

OPERATION (continued)

5. To use with the APP,
   - Download the APP ('appy holidays) from the iPhone APP Store or the Play Store for android smartphones. Or
   - Scan the QR code at the front of this instruction manual which will take you directly to the APP.

After download the APP, you will see the screen below:

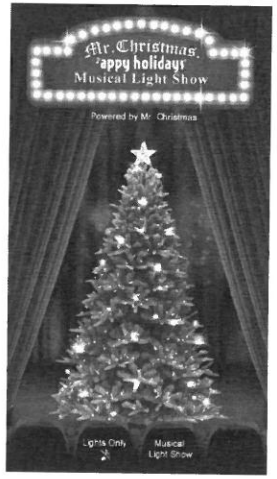

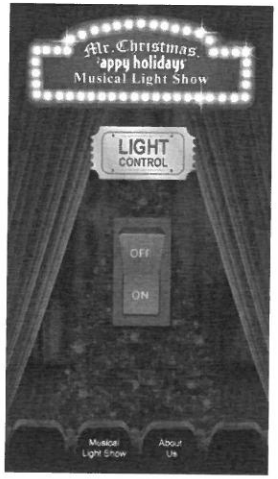

Press the function keys to adjust the volume, music, light on screen and select the song you want to play

SONG LIST

1. Silent Night
2. Jingle Bells
3. 12 Days of Christmas
4. Joy to The World
5. O Christmas Tree
6. O Come All Ye Faithful
7. We wish You a Merry Christmas
8. Deck the Halls
9. Here We Come A-Caroling
10. Jolly Old St. Nicholas
11. Oh Little Town of Bethlehem
12. Hark the Herald Angels Sing
13. It Came Upon a Midnight Clear
14. God Rest Ye Merry Gentlemen
15. We Three Kings of Orient Are
16. Good King Wenceslas
17. Angels We Have Heard on High
18. Carol of the Bells
19. Dance of The Sugar Plum Fairy
20. Ding Dong Merrily On High

TROUBLESHOOTING

Your 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS® has been designed to give many seasons of trouble free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

PROBLEM	LIKELY CAUSE	SOLUTION
No lighting No music	No power	1. Make sure the unit plug is plugged into a working outlet and the plug is properly plugged into the jack. 2. Make sure the batteries are installed properly aligned with the "+" and "-"polarity as marked inside battery compartment. 3. Replace all batteries with new batteries.
	Overload caused by connecting light string or decorative lighting outfits over 420W.	Replace the fuse (follow the procedure as outlined in the fuse replacement section in this manual).
	Exhausted batteries in the remote.	Replace with new "AA" Batteries.
	Unit not being operated properly.	See operation section, page 5-7.
No lighting but music plays	Faulty light string/bulbs.	Check light string for burnt out bulbs. Suggestion : Check your light string before installation.
		Check your fuse in light string plug, and replace if damaged.

For more information about this product. Please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you.

The following is only applicable to customers in the USA:

WARRANTY

Mr. Christmas warrants to the original consumer/purchaser of the 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS®that it will be free from defects in material and workmanship for a period of 90 days from the date of purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer/purchaser and a description of the defect. Please call warranty service at 1-800-467-9627 for a claim number and instructions on how and where to return the item.

Mr. Christmas shall not be liable for any other damages or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers/purchasers.

This warranty does not cover defects caused by damage in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may be also have other rights which vary from state to state.

Federal Communications Commission Code, Part 15:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

‘APPY HOLIDAYS®
LIGHTS AND SOUNDS OF CHRISTMAS®
Manuel d’instructions
Modèle N° 60401

Scanner pour obtenir l’APP

Brevet en instance

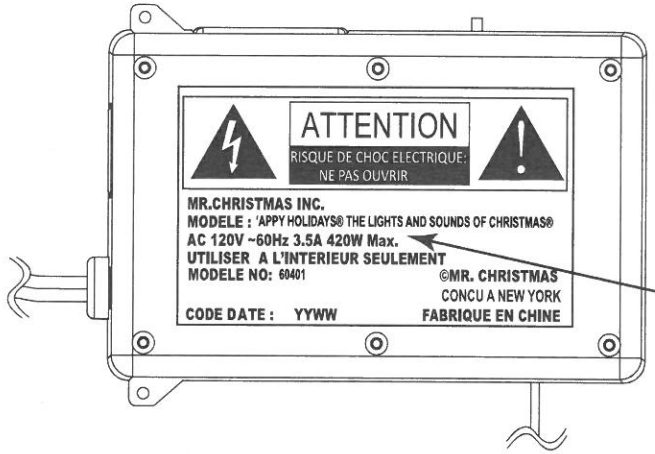

Caractéristiques : AC 120V~60Hz 420W Max.

ATTENTION - Lors de l’utillsation du produit ‘APPY HOLIDAYS® THE LIGHTS AND SOUNDS OF CHRISTMAS®, des précautions élémentaires de sécurité devraient être observées pour éviter des risques d’incendies, de chocs électriques et de blessures. Ce produit devrait être branché à une sortie GFCI. La fiche principale de ce débranchement et devrait toujours être facile d’accès.

SIGNALETIQUE DE SECURITE

ATTENTION - destiné à alerter l’utilisateur de la présence d’instructions importantes concernant l’utilisation et la maintenance (réparation) dans la documentation fournie avec l’appareil.

RISQUE DE CHOC ÉLECTRIQUE - destiné à alerter l’utilisateur de la présence de « tension dangereuse » non isolée à l’intérieur du produit, celle-ci étant d’une magnitude suffisante pour constituer un risque de choc électrique.

CA SEULEMENT

CECI N'EST PAS UN JOUET !
CONSIGNES DE SÉCURITÉ IMPORTANTES

Lorsque vous utilisez des produits électriques, des précautions de base doivent toujours êtres observées, telles que :

1. VEUILLEZ LIRE ET RESPECTER TOUTES LES CONSIGNES DE SÉCURITÉ.

2. N'utilisez pas de produits à usage saisonnier à l'extérieur, sauf s'il est indiqué qu'ils sont propres à une utilisation intérieure et extérieure. Lorsque les produits sont utilisés à l'intérieur, branchez-les sur une prise équipée d'un disjoncteur de fuite de terre (GFCI). Si aucun disjoncteur n'est fourni, contactez un électricien qualifié afin d'en faire installer un correctement.
3. Ce produit saisonnier n'est pas conçu pour une installation ou un usage permanent.
4. N'installez ou ne placez pas le produit près d'un chauffage électrique ou à gaz, d'une cheminée, de bougies ou de toute autre source de chaleur semblable.
5. N'agrafez ni ne clouez les fils de ce produit, et ne les posez pas sur des clous ou des crochets métalliques coupants.
6. Ne posez pas de lampe sur le câble d'alimentation ou sur tout autre fil.
7. Débranchez le produit lorsque vous quittez la maison, lorsque vous allez vous coucher ou lorsque vous le laissez sans surveillance.
8. Ceci est un produit électrique - pas un jouet ! Pour éviter tout risque d'incendie, de brûlures, de blessures personnelles et de choc électrique, ne jouez pas avec ce produit et ne le laissez pas à la portée de jeunes enfants.
9. Ce produit ne doit pas être utilisé à d'autres fins que celle pour laquelle il a été conçu.
10. N'accrochez pas d'autres ornements ou objets au câble, au fil ou à la guirlande lumineuse.
11. Ne fermez pas de porte ou de fenêtre sur ce produit ou sur sa rallonge électrique car cela pourrait endommager l'isolation du câble.
12. Ne couvrez pas ce produit avec un chiffon, du papier ou tout autre matériel qui ne fait pas partie de l'appareil durant son utilisation.
13. Cet appareil est doté d'une fiche polarisée (une lamelle est plus large que l'autre) afin de réduire le risque de choc électrique. Cette fiche se branchera sur une prise polarisée dans un sens uniquement. Si la fiche n'entre pas entièrement dans la prise, retournez la fiche. Si elle n'entre toujours pas, prenez contact avec un électricien qualifié. N'utilisez pas de rallonge électrique tant que la fiche ne peut pas être entièrement branchée. Ne modifiez ni ne remplacez pas la fiche.
14. Ce produit dispose d'une protection contre la surcharge (fusible). Un fusible brun signale une surcharge ou une situation de court-circuit. Si le fusible saute, débranchez le produit de la prise murale. Débranchez également tout câble ou produit additionnel qui pourrait être raccordé au produit. Remplacez le fusible en suivant les instructions de la section « dépannage par l'utilisateur » (respectez les caractéristiques du produit vis-à-vis du calibre de fusible) puis vérifiez le produit. Si le fusible de remplacement saute, il se peut qu'il y ait un court-circuit et vous devez alors vous débarrasser du produit.
15. Veuillez lire et respecter toutes les consignes qui sont sur le produit ou qui l'accompagnent.

16. CONSERVEZ CES CONSIGNES.

TABLE DES MATIÈRES

1. INSTRUCTIONS D'UTILISATION ET D'ENTRETIEN _____ 14
2. CONSIGNES DE DÉPANNAGE PAR L'UTILISATEUR _____ 14
3. CARACTÉRISTIQUES _____ 15
4. DESCRIPTION _____ 15
5. INSTALLATION _____ 15
6. FONCTIONNEMENT _____ 16
7. LISTE DE CHANSONS _____ 19
8. RÉSOLUTION DES PROBLÈMES _____ 20

INSTRUCTIONS D'UTILISATION ET D'ENTRETIEN

1. Lorsque le produit est accroché à un arbre naturel, ce dernier doit être bien entretenu et en bonne santé. Ne l'accrochez pas sur un arbre dont les épines sont brunes ou se décrochent facilement. Maintenez le socle de l'arbre rempli d'eau.
2. Lorsque le produit est accroché à un arbre, ce dernier doit être bien fixé et stable.
3. Avant d'utiliser ou de réutiliser, examinez le produit soigneusement. Débarrassez-vous de tout produit dont un câble ou un fil est coupé, endommagé ou effiloché, dont le porte-lampe ou le boîtier est fendu, dont les branchements sont desserrés ou sur lequel du fil de cuivre est exposé.
4. Lorsque vous rangez le produit pour un usage ultérieur, retirez soigneusement le produit de son emplacement, que ce soit un arbre, une branche ou un buisson, afin d'éviter tout dommage aux fils, branchements et conducteurs du produit.
5. Lorsque vous ne vous servez pas du produit, entreposez-le dans un lieu frais et sec, hors des rayons du soleil.

CONSIGNES DE DÉPANNAGE POUR L'UTILISATEUR

Votre produit 'APPY HOLIDAYS®LIGHTS AND SOUNDS OF CHRISTMAS® est fourni avec des fusibles de rechange au cas où des fusibles dans la prise seraient brûlés. Assurez-vous de remplacer un fusible brûlé par un fusible de même calibre : Fusible 5A 125V listé UL.

MISE EN GARDE : AVANT DE REMPLACER, DÉBRANCHEZ TOUJOURS LA PRISE D'ALIMENTATION ÉLECTRIQUE

RISQUE D'INCENDIE. Ne remplacez pas la fiche. Elle contient une sécurité (fusible) qui ne doit pas être retirée. Débarrassez-vous du produit si la fiche est endommagée.

1. Saisissez la fiche et retirez-là de la prise murale ou de son appareil électrique. Ne débranchez pas en tirant sur le câble.
2. Ouvrez le couvercle du fusible. Faites glisser le couvercle d'accès au fusible sur le haut de la fiche, en direction des lamelles.
3. Retirez soigneusement le fusible. Mettez la fiche à l'envers pour faire sortir le fusible.
4. Risque d'incendie. Ne remplacez le fusible qu'avec un fusible de 5 ampères et de 125 volts (fourni avec ce produit).
5. Fermez le couvercle du fusible. Faites glisser le couvercle d'accès au fusible surle haut de la fiche.

CONNEXION GUIRLANDES LUMINEUSES-CAPACITÉ MAXIMALE 420 WATTS

Si vous branchez une guirlande lumineuse dont la puissance électrique (W) n'est pas mesurée, calculez la puissance électrique de la manière suivante : Multipliez le courant (__ A) présent sur l'étiquette de type FLAG par 120.
Par exemple : La guirlande lumineuse a une charge de 120 V, 60 Hz, 0,2 A. Additionnez la puissance électrique de chaque guirlande lumineuse afin d'obtenir un total qui ne dépasse pas 0,2 watts.

CARACTÉRISTIQUES

Modèle 60401
Charge de la boîte de contrôle : 120 VAC, 60 Hz, 3,5, 420 W
Classement de la télécommande : Piles « AA » cell x 3, 4,5 V

DESCRIPTION

Merci d'avoir acheté le produit 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS.®

La capacité maximale est de 420 watts

ATTENTION : NE BRANCHEZ PAS LES GUIRLANDES LUMINEUSES OU TOUT AUTRE ENSEMBLE AU-DELÀ DE LA CAPACITÉ PERMISE.

INSTALLATION

Remarque : Si vous n'avez pas encore assemblé vos luminaires, il serait peut-être utile d'examiner vos guirlandes lumineuses avant de les assembler afin de repérer des ampoules manquantes/défaillantes.

AVANT D'INSTALLER : Pensez à la meilleure façon d'installer votre arrangement luminaire.

Capacité :
'APPY HOLIDAYS®LIGHTS AND SOUNDS OF CHRISTMAS® dispose d'une capacité de 420 watts. Référez-vous à l'emballage, au manuel d'instructions ou à l'étiquette des mises en garde sur vos lumières de Noël pour connaître la puissance électrique exacte de chaque élément branché sur l'appareil. Afin de ne pas dépasser 420 watts, vous devez additionner la puissance électrique de chaque accessoire branché sur l'appareil afin de connaître la puissance électrique totale. Voir la section « Connexion des guirlandes lumineuses » à la page 14.

ATTENTION : NE PAS DÉPASSER 420 WATTS

FONCTIONNEMENT

1. Branchez votre luminaire de Noël sur la prise fournie avec l'appareil (420 WATTS MAX).
2. Branchez le câble de l'appareil sur une prise équipée d'un disjoncteur de fuite à la terre (GFCI).
3. Placez le Capteur sur l'arbre de Noël et pointez-le vers l'extérieur en tant que FIG. 1
4. Insérez 3 piles AA dans la télécommande en vous assurant d'aligner les polarités « + » et « - » dans les bonnes positions.

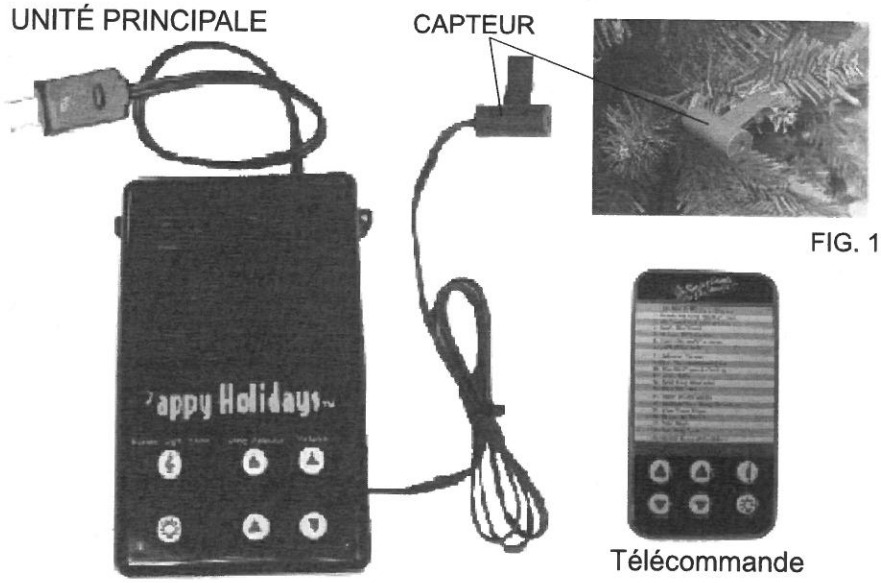

FIG. 1

5. Utilisez les six boutons de fonction sur la télécommande ou sur le clavier de l'appareil afin de contrôler la musique et les jeux de lumière.

Music light show [Spectacle musique et lumières]	Song select keys [Boutons de sélection de chanson]	Volume select keys [Bouton de réglage du volume]
« 𝄞 » musique on / off	«▲» revenir à la chanson précédente	«▲» augmenter le volume
« ☼ » sélection du mode léger	«▼» passer à la chanson suivante	«▼» baisser le volume

FONCTIONNEMENT (suite)

Pour l'unité principale ou la télécommande :

Appuyez sur « 𝄞 », la musique jouera et la guirlande lumineuse branchée dans l'unité clignotera.
Appuyez à nouveau et la musique s'arrêtera et la guirlande lumineuse indiquera « ÉTEINTE ».

Vous pouvez changer l'effet lumineux de la guirlande en appuyant sur « ☼ » une fois, la lumière de la guirlande sera continue.
Appuyez à nouveau et les lumières indiqueront « ÉTEINTES ».

Changez la chanson en lecture en appuyant sur les touches « ▼ » , « ▲ » de sélection des chansons.
Réglez le volume de la musique en appuyant sur les touches « ▼ » , « ▲ » du volume.

Lorsque la musique est éteinte, appuyez sur « ☼ » pour allumer les guirlandes lumineuses, appuyez de nouveau pour éteindre les guirlandes

FONCTIONNEMENT (suite)

5. Pour utiliser avec l'APP,
   - Téléchargez l'APP ('appy holidays) du APP Store d'Apple ou du magasin Play Store pour les téléphones intelligents Android. Ou
   - Scannez le code QR situé à l'avant de ce manuel d'instructions, lequel vous dirigera directement à l'APP.

Une fois l'APP téléchargée, l'écran suivant s'affichera :

Appuyez sur les touches de fonctionnement pour ajuster le volume, la luminosité de l'écran puis sélectionnez la chanson que vous désirez écouter.

LISTE DE CHANSONS

1. Silent Night
2. Jingle Bells
3. 12 Days of Christmas
4. Joy to The World
5. O Christmas Tree
6. O Come All Ye Faithful
7. We wish You a Merry Christmas
8. Deck the Halls
9. Here We Come A-Caroling
10. Jolly Old St. Nicholas
11. Oh Little Town of Bethlehem
12. Hark the Herald Angels Sing
13. It Came Upon a Midnight Clear
14. God Rest Ye Merry Gentlemen
15. We Three Kings of Orient Are
16. Good King Wenceslas
17. Angels We Have Heard on High
18. Carol of the Bells
19. Dance of The Sugar Plum Fairy
20. Ding Dong Merrily On High

GUIDE DE DÉPANNAGE

Votre produit 'APPY HOLIDAYS® LIGHTS AND SOUNDS OF CHRISTMAS® été conçu pour fonctionner de nombreuses saisons durant sans panne. Au cas où un problème se présenterait, veuillez vous référer aux solutions suggérées dans le tableau ci-dessous.

PROBLÈME	CAUSE PROBABLE	SOLUTION
Aucune lumière Aucune musique	Pas de courant	1. Assurez-vous que la fiche de l'appareil est bien branchée sur une prise murale qui fonctionne et que la fiche est correctement branchée sur la prise. 2. Assurez-vous que les piles sont installées correctement dans la télécommande, suivant les orientations pour les pôles « + » et « - » indiquées à l'intérieur du compartiment à piles. 3. Remplacez toutes les piles par des neuves.
	Une surcharge causée par le branchement de guirlandes lumineuses ou d'un ensemble de luminaires décoratifs de plus de 420W.	Remplacez le fusible (suivez les procédures indiquées dans la section sur le remplacement des fusibles de ce manuel).
	Les piles de la télécommande sont faibles.	Remplacez avec de nouvelles piles « AA ».
	L'appareil n'est pas utilisé correctement.	Voir la section sur son fonctionnement, pages 16 à 18.
Aucune lumière mais la musique joue	Guirlandes lumineuses/ampoules défectueuses.	Examinez la guirlande lumineuse pour y chercher des ampoules brûlées. Conseil : Examinez votre guirlande lumineuse avant de l'installer.
		Examinez le fusible dans la prise de la guirlande lumineuse et remplacez-le s'il est endommagé.

Pour plus de renseignements concernant ce produit. Veuillez appeler au 1-800-467-9627, ou visitez notre site Internet : www.mrchristmas.com. Nous serons heureux de vous aider.

Cet appareil numérique de classe B est conforme aux règles canadiennes ICES-003.

Fabriqué en Chine